

FOREWORD

To assist you in your service activities, this manual explains the main characteristics of the 2002 RAV4 EV, in particular providing a technical explanation of the construction and operation of new mechanisms and new technology used.

Applicable models: BEA11 Series

This manual is divided into 4 sections.

- 1. Introduction** – Vehicle Outline and model line-up.
- 2. Technical Description** – Technical explanation of the construction and operation of each new system and component.
- 3. Appendix** – Major technical specifications of the vehicle.

CAUTION, **NOTICE**, **REFERENCE** and **NOTE** are used in the following ways:

CAUTION	A potentially hazardous situation which could result in injury to people may occur if instructions on what to do or not do are ignored.
NOTICE	Damage to the or vehicle components may occur if instructions on what to do or not do are ignored.
REFERENCE	Explains the theory behind mechanisms and techniques.
NOTE	Notes or comments not included under the above 3 titles.

For detailed service specifications and repair procedures, refer to the following Repair Manuals:

Manual Name	Pub. No.
● 2002 RAV4 EV Repair Manual	RM892U
● 2002 RAV4 EV Electrical Wiring Diagram Manual	EWD467U

All information contained herein is the most up-to-date at the time of publication. We reserve the right to make changes without prior notice.

TOYOTA MOTOR CORPORATION