

# SECTION 2-1

---

 
## OPERATION OF INSTRUMENTS AND CONTROLS

### Keys and Doors

Keys .....	36
Side doors .....	36
Power windows .....	38
Back door .....	40
Hood .....	41

2-1

## Keys

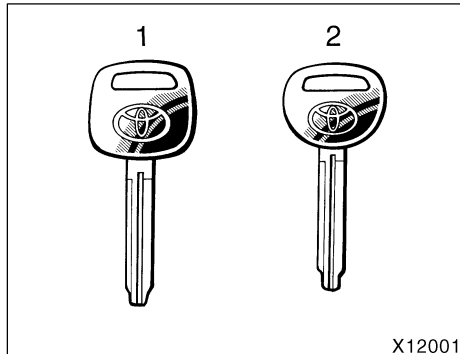


**Your vehicle is supplied with two kinds of keys.**

1. Master key—This key works in every lock.
2. Sub key—This key will not work in the glove box.

To protect items locked in the glove box when someone else parks your vehicle for you (such as an attendant or valet), leave the sub key with that person.

 Since the side doors and back door can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

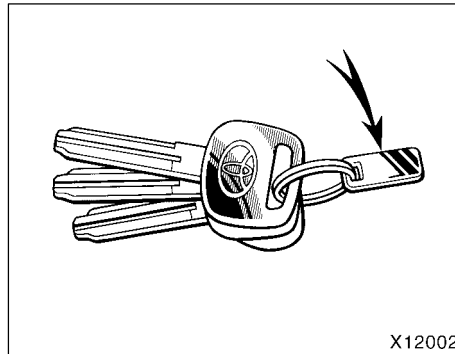


## KEY NUMBER PLATE

**Your key number is shown on the plate. Keep the plate in a safe place such as your wallet, not in the vehicle.**

If you should lose your keys or if you need additional keys, duplicates can be made by an EV service station using the key number.

We recommend you to write down the key number and keep it in safe place.
 
## Side doors

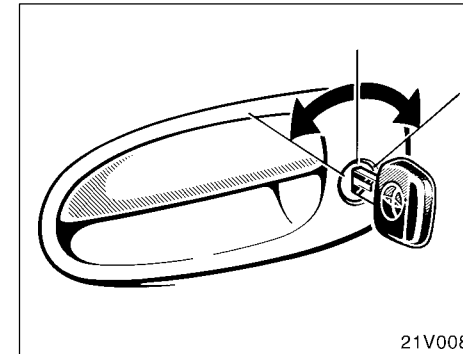


**LOCKING AND UNLOCKING WITH KEY**  
**Insert the key into the keyhole and turn it.**

To lock: Turn the key forward.

To unlock: Turn the key backward.

 Vehicles with power door lock system—All the side doors and back door lock and unlock simultaneously with either front door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all the side doors and back door simultaneously.

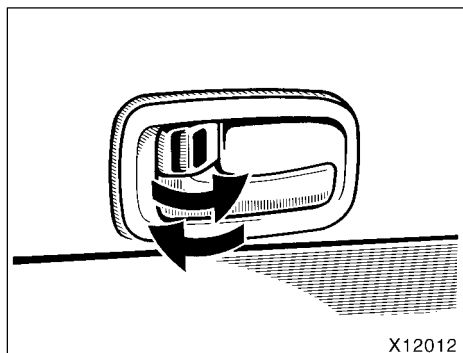


**LOCKING AND UNLOCKING WITH  
INSIDE LOCK KNOB**

**Move the lock knob.**

 To lock: Push the knob forward.

To unlock: Pull the knob backward.

Closing the door with the lock knob in the lock position will also lock the door. Be careful not to lock your keys in the vehicle.

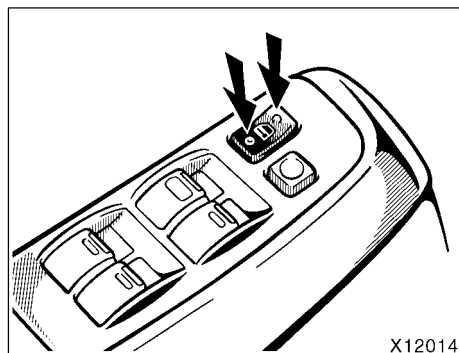

**Driver's side**

 
**LOCKING AND UNLOCKING WITH  
POWER DOOR LOCK SWITCH**

**Push the switch.**


To lock: Push the switch on the front side.

To unlock: Push the switch on the rear side.

Operating the switch simultaneously locks or unlocks both side doors and the back door.

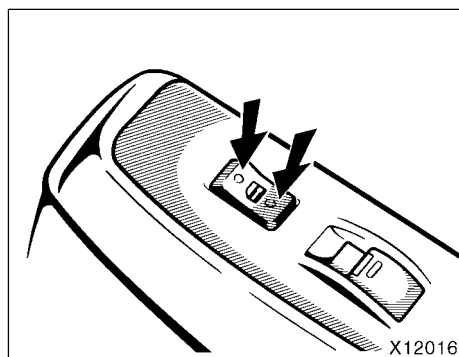

**Passenger's side**

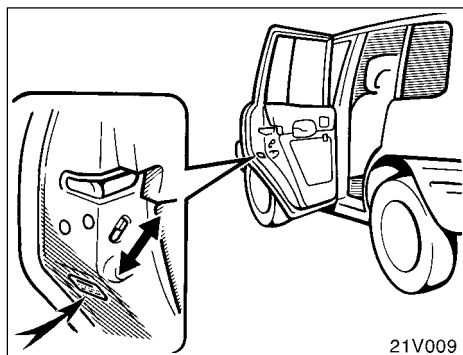 


21V009


#### REAR DOOR CHILD-PROTECTORS

 Move the lock lever to the "LOCK" position as shown on the label.

This feature allows you to lock a rear door so it can be opened from the outside only, not from inside. We recommend using this feature whenever small children are in the vehicle.

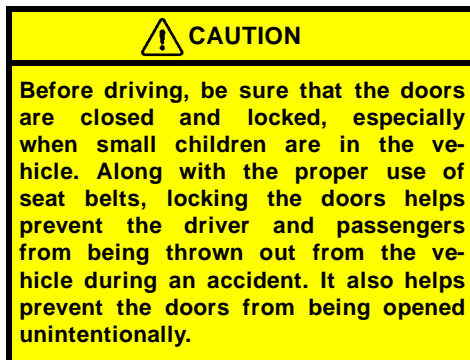

#### Power windows

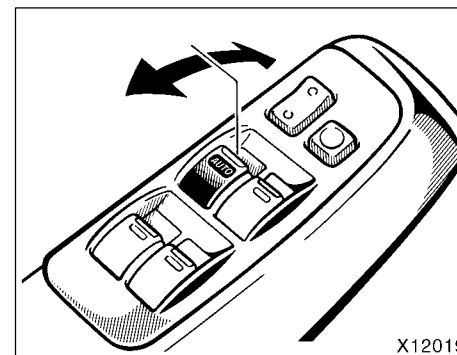 

X12019

The windows can be operated with the switch on each door.

The motor switch must be in the "ON" position.

**Key off operation:** If the driver's door is closed, they work for 45 seconds even after the motor switch is turned off. They stop working when the driver's door is opened.


#### OPERATING THE DRIVER'S WINDOW

 Use the switch on the driver's door.

**Normal operation:** The window moves as long as you hold the switch.

To open: Lightly push down the switch.


To close: Pull up the switch.

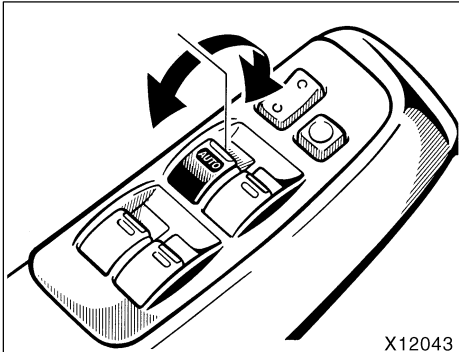


**Automatic operation:** Push the switch completely down or pull it completely up, and then release it. The window will fully open or close. To stop the window partway, lightly move the switch in the opposite direction and then release it.

**Jam protection function:** During automatic closing operation, the window stops and opens half way if something gets caught between the window and window frame.

If the window receives a strong impact, this function may work even if nothing is caught.

 **CAUTION**

 - Never try jamming any part of your body to make the jam protection function work intentionally.
- The jam protection function may not work if something gets caught just before the window is fully closed.

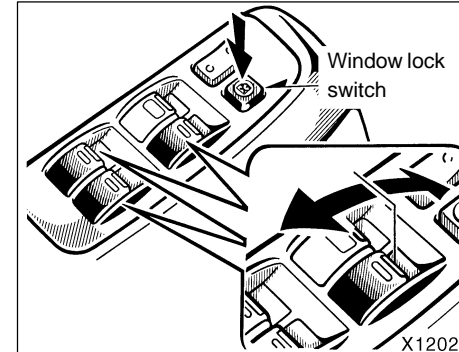

#### OPERATING THE PASSENGERS' WINDOWS

 
Use the switch on each passenger's door or the switches on the driver's door that control each passenger's window.

The window moves as long as you hold the switch.

To open: Push down the switch.

To close: Pull up the switch.

If you push in the window lock switch on the driver's door, the passengers' windows cannot be operated.

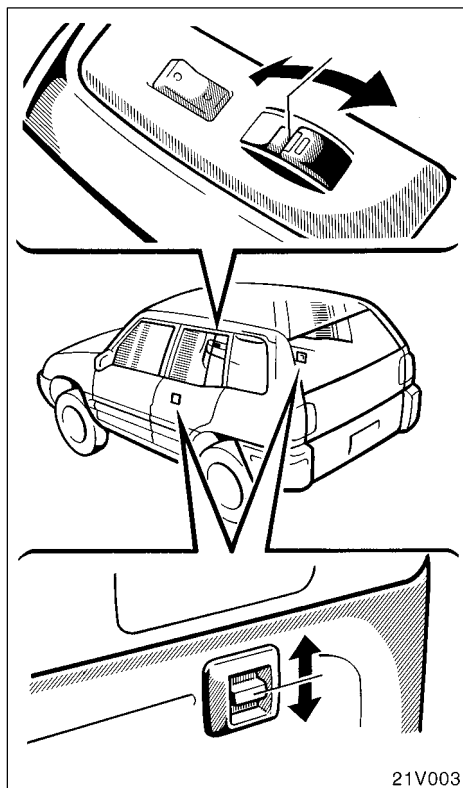


**⚠ CAUTION**

To avoid serious personal injury, you must do the following.

- Always make sure the heads, hands and other parts of the bodies of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands get caught in a closing window, it could result in a serious injury. When anyone closes the power windows, make sure that they operate the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock switch to prevent them from making unexpected use of the switches.
- Never leave small children alone in the vehicle, especially with the key still inserted. They could use the power window switches and get trapped in a window. Unattended children can be involved in serious accidents.

 **Back door**

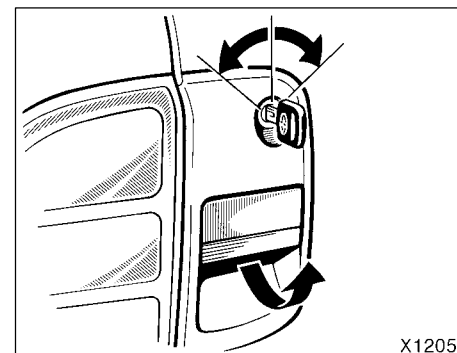

**LOCKING AND UNLOCKING WITH KEY**

Insert the key into the keyhole and turn it.

To lock: Turn the key counterclockwise.

To unlock: Turn the key clockwise.

 
When closing the back door, make sure it is fully closed.

See "Luggage stowage precautions" on page 136 in Section 3 for precautions in loading luggage.

**CAUTION**

If the open back door hides the rear stop and tail lights or rear turn signal lights while you are parked, other road users must be warned of the presence of your vehicle by a warning triangle or other device.

## Hood

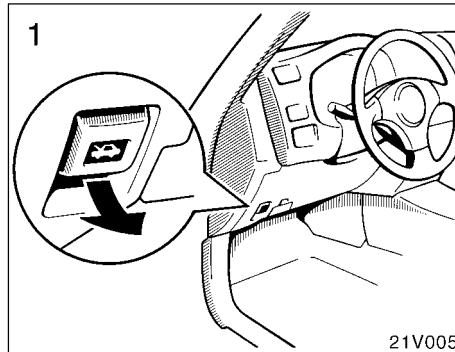


To open the hood, do the following.


1. Pull the hood lock release lever. The hood will spring up slightly.

**CAUTION**

 Before driving, be sure that the hood is closed and securely locked. Otherwise, the hood may open unexpectedly while driving and an accident may occur.

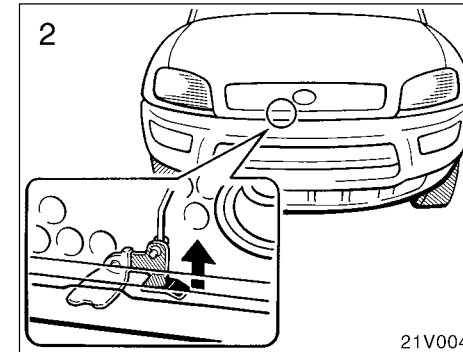

 2. In front of the vehicle, pull up on the auxiliary catch lever and lift the hood.

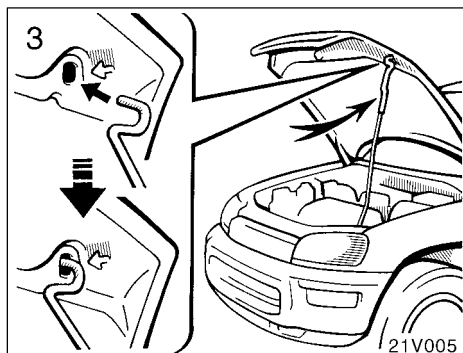

**3. Hold the hood open by inserting the support rod into the slot.**

Before closing the hood, check that you have not forgotten any tools, rags, etc. and return the support rod to its clip—this prevents rattles. Then lower the hood until it is about 20 cm (8 in.) above the motor compartment and release it. If the hood is still not fully closed, lift and release the hood again. After closing the hood, make sure it is securely locked.

If you notice while driving that the hood is not securely locked, stop the vehicle at once and close the hood.

**⚠ CAUTION**

- Right after driving, the support rod may be hot, so only touch the part coated with nylon.
- After inserting the support rod, make sure it supports the hood securely.
- When closing the hood, be careful not to get your hands caught between the hood and the vehicle body.
- Before driving, be sure that the hood is securely locked. Otherwise, the hood may open unexpectedly and an accident may occur.

**NOTICE**

*Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod inserted into the slot could cause the hood to bend.*