



BATTERY TRAY TEMPERATURE SENSOR INSPECTION

BA009-03

1. REMOVE BATTERY TRAY TEMPERATURE SENSOR
2. INSPECT BATTERY TRAY TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals (1 – 3 or 2 – 4).

Resistance: Refer to the graph

If the resistance is not as specified, replace the sensor.

3. REINSTALL BATTERY TRAY TEMPERATURE SENSOR