



# TRACTION BATTERY TEMPERATURE SENSOR INSPECTION

BA00A-03

1. REMOVE TRACTION BATTERY TEMPERATURE SENSOR
2. INSPECT TRACTION BATTERY TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: Refer to the graph**

If the resistance is not as specified, replace the sensor.

3. REINSTALL TRACTION BATTERY TEMPERATURE SENSOR