



INSTALLATION

Installation is in the reverse order of removal.

INSTALL NEW BATTERIES

- (a) w/ Temperature Sensor:
Replace the sorted battery from the battery tray, and then remove temperature sensor.
- (b) w/ Temperature Sensor:
Install a new battery with the sensor to the battery tray with the same position by marking + and – match.
- (c) w/ Temperature Sensor:
Exchange the battery (5–6, 12–11 or 20–18) and then install the temperature sensor as shown in the illustration
- (d) w/o Temperature Sensor:
Install a new battery to the battery tray with the same position by marking + and – match.

HINT:

Set a holding cord aside by the battery as shown in the illustration.