


INSPECTION

INSPECT BATTERY COOLING FAN MOTOR OPERATION

- (a) Connect the battery to the battery cooling fan motor connector as shown.

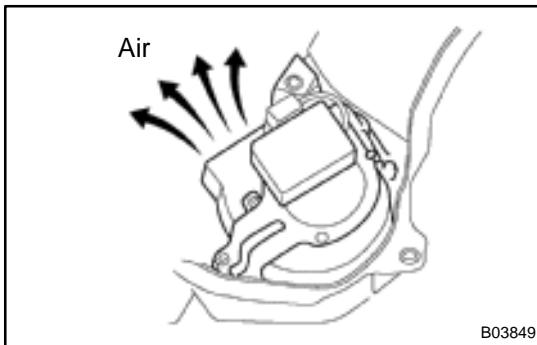

- (b) Check that the fan motor rotates smoothly and blows air.

NOTICE:

- **Keep battery as far away from the traction battery as possible.**
- **Always do the switching at the battery side.**

If the operation is not as specified, replace the fan motor.