

ELECTRIC VEHICLE  
CHARGING  
STATION

*DS-200*



## DS-200-DL User's Manual



ELECTRIC VEHICLE INFRASTRUCTURE, INC.  
11839 INDUSTRIAL COURT ~ AUBURN, CA 95603

## **PLEASE NOTE**

This user's manual includes the latest information at the time of printing. Electric Vehicle Infrastructure, Inc. (EVI) reserves the right to make changes to this product without further notice. Changes or modifications to this product by other than an authorized service facility could void the product warranty. If you have questions about the use of this product, contact your customer service representative. Refer to the Customer Support section located in this guide.

# CONTENTS

## IMPORTANT SAFETY INSTRUCTIONS

Safety Guidelines . . . . .	1
-----------------------------	---

## OPERATION

Front Panel . . . . .	3
In Case of Difficulty. . . . .	4

## FEATURES

Personal Protection System . . . . .	5
Ground Monitor Circuit . . . . .	5
Auto-Reclosure . . . . .	5
Off-Peak Charging . . . . .	5
Power Outage Restore . . . . .	5
External Error Indication . . . . .	6
Maintenance Current . . . . .	6

## INSTALLATION

Service Connections . . . . .	7
Mounting Procedures . . . . .	10
Wiring . . . . .	11
Testing After Installation. . . . .	12

FOR THE SERVICE TECHNICIAN . . . . .	13
--------------------------------------	----

SPECIFICATIONS . . . . .	15
--------------------------	----

FCC INFORMATION . . . . .	16
---------------------------	----

WARRANTY INFORMATION . . . . .	17
--------------------------------	----

CUSTOMER SUPPORT . . . . .	18
----------------------------	----

MAINTENANCE . . . . .	18
-----------------------	----

# IMPORTANT SAFETY INSTRUCTIONS

Carefully read these instructions and the charging instructions in your vehicle owner's handbook before charging your electric vehicle.

The following symbols may be found in your handbook or on labels affixed to your conductive charge station:

**Note** *This means pay particular attention. Notes contain helpful suggestions.*



**Caution** *This symbol means be careful. You are capable of doing something that might result in damage to equipment.*



**Warning** *This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any electrical equipment, be aware of the hazards involved with electrical circuitry and standard practices for preventing accidents.*

## Safety Guidelines

- Use this charge station to charge electric vehicles equipped with a conductive charge port only. See the vehicle's owner's handbook to determine if the vehicle is equipped with a conductive charge port.
- Make certain the charge station's supply cables are positioned so they will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- There are no user serviceable parts inside. Refer to the Customer Support section in this manual for service information. Do not attempt to repair or service the charge station yourself.
- Do not operate your charge station with a visibly damaged supply cable or charge station. Contact your Service Representative for service immediately. Refer to the Customer Support section in this manual for information on the Service Representative in your area.



**Warning:** Turn off input power to your charge station at the circuit breaker panel before servicing or cleaning the unit.

- **VENTILATION:** Some electric vehicles require an external ventilation system to prevent the accumulation of hazardous or explosive gases when charging indoors. Check the vehicle's owner's handbook to determine if your vehicle requires ventilation during indoor charging.

**Note** Those vehicles which follow the SAE J1772 standard for communication with the charging station can inform the DS-200 that they require an exhaust fan. The DS-200-DL is not equipped to control ventilation fans. If an exhaust fan is requested, the DS-200-DL will not charge the vehicle. If this function is required, ask your EVI representative for information on the EVI ICS-200B, which has the exhaust fan control feature.




**Caution: DO NOT** charge your vehicle indoors if it requires ventilation. Contact your Service Representative for information.

# OPERATION

The DS-200-DL Dual Electric Vehicle Charging Station is a conductive charge station that provides the electric vehicle (EV) user with a safe and manageable link between the power grid and the EV.

*Figure 1. The DS-200-DL Dual Charging Station*

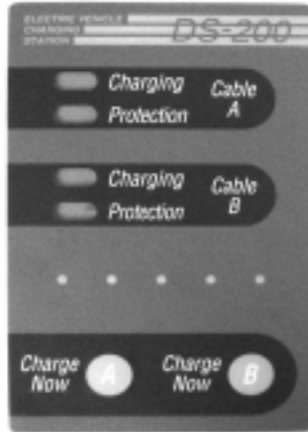

The DS-200-DL Electric Vehicle Charging Station is very easy to use. Just remove the charging connector from its holder, and plug it into the vehicle's charge port. Upon insertion, push down on the handle to lock it into place. Normally, the vehicle will immediately request a charge using a special communication line in the cable, and the contactor inside the DS-200-DL can be heard closing. The green Charging light will come on, and charging will begin. After an average driving day, it will require several hours to recharge completely. Charging overnight is the most convenient way to maintain healthy batteries and ensure the vehicle's full range will be available for the next day.

To remove the connector from the vehicle, depress the button in the middle of the handle to release the connector. When not in use, store the connector in the Charging Station's connector holder.

## Front Panel

The front panel has a GREEN and a RED light for each of the two vehicles to indicate the status of the DS-200-DL. The operational state of the unit can be known just by looking at the panel lights, and comparing them with table 1 on page 4.

Table 1. Front Panel Indicators

(Green)	(Red)	
CHARGING	PROTECTION	STATUS of DS-200-DL
--	--	not connected, or vehicle not requesting charge
lit	--	charging
--	lit	ground fault tripped, ground missing, or service required
lit	lit	problem on vehicle
blink	--	Charging is disabled by external timer, or unit is in Power Outage Restore mode

Note: in the table above, a (--) symbol indicates the LED is off.

## **In Case of Difficulty**

EVI recognizes that this Charging Station will be heavily relied upon to charge your electric vehicle for daily transportation needs. Therefore, every effort will be made to restore service should problems arise.

In the event of a problem, charging will stop and the red Protection light will come on. If this happens, please try the two simple steps below before calling your Field Service Representative.

1. Remove the cable connector from the vehicle socket. The red Protection light may go out. If it does go out, plug the connector back into the socket, and see if charging begins normally.
2. If the red Protection light does not go out when the connector is removed, be sure the connector is removed from the vehicle socket and switch off power at the circuit breaker feeding power to the DS-200-DL. Wait a few seconds and switch the circuit breaker back on again. If the Protection light does not come back on, re-connect the cable to the vehicle. Charging should begin normally. If charging does not begin, or if the Protection light comes back on, call for Field Service.

The information gained by the above steps will help the Field Service Representative decide what the problem is, and how best to get your DS-200-DL operational again as quickly as possible.

# FEATURES

The following features are supported by the DS-200-DL:

**Personal Protection System:** Ground Fault protection with Self-Testing and Auto-Reclosure (see below), no manual resetting or testing is necessary.

**Ground Monitoring Circuit:** Constantly checking for the presence of a Safety Ground connection.

**Auto-Reclosure:** If a problem occurs that interrupts charging, the unit will automatically clear all error indications after 5 minutes, and attempt to begin charging again. If the problem is immediately sensed a second time, it will wait another 5 minutes and try again. This process will repeat several times, at which point power will be removed and no further attempt will be made. The red front panel Protection LED will be lit.

This feature helps ensure that your vehicle will be charged and ready for use when needed. Temporary problem indications such as ground-faults or utility power surges can be overcome automatically without the need for the user to manually re-initiate charging.

**Off-Peak Charging:** for this feature, you must have an external timer installed (purchased separately), and also have your local utility install a special Time of Use meter. Many utilities plan to give very low rates to those EV owners who charge in the late evening. If a timer is installed, you do not have to wait until the late evening to plug the DS-200-DL's connector into the vehicle. You may plug in at any time. Even though the vehicle may immediately request a charge, the timer will cause the DS-200-DL to delay energizing the cable until the off-peak hours when most electric utilities have light demand. With this feature, the green Charging light will be blinking while the vehicle is waiting for the timer to allow charging. If this feature is desired, please call your local utility to be sure the Time of Use meter is available in your area before having the timer installed. Technical information to help connect the timer to the DS-200-DL can be found in the section titled Specifications on page 15 in this manual.

**Power Outage Restore:** This feature is built-in to the DS-200-DL, but will only be apparent when the utility power fails during charging. If the charging connector is still plugged into the vehicle when utility power is restored, the green Charging light will blink and the unit will not energize the cable for a random time between 2 and 12 minutes. This is to prevent the utility's grid from experiencing a large surge at turn-on, allowing EV's in the area to begin drawing current at random times rather than all at once.

**Note:** The user does not need to be concerned that the vehicle needs attention after a power outage. The DS-200-DL will automatically resume charging when power is restored.

**External Error Indication:** Whenever the red Protection LED is lit, a relay on the board will provide a contact closure that can be used to remotely indicate that a problem exists. A fleet vehicle yard, for example, could use this feature to light a lamp or ring a bell in the main office, letting them know immediately that a vehicle has a charging problem. This early warning helps assure that each vehicle will be properly charged and ready for use when needed.

**Maintenance Current:** If the unit is set up for Off-Peak Charging as described above, normal charging current cannot be drawn by the vehicle until the Off-Peak hours. However, the DS-200-DL can be set up to allow a minimum amount of current while waiting for the timer to allow full-rate charging. This is known as Maintenance Current, used for all power needs on the vehicle except charging the main battery pack. An example would be preheating the cab, or keeping the auxiliary battery topped off. As in the Off-Peak mode above, the green Charging light will flash if the vehicle is connected and waiting for the timer to allow charging. The contactor will close immediately to supply this small amount of power, but the main battery pack will not be allowed to charge.

The Maintenance Current feature can be selected by connecting the Timer's control wire to the High/Low pin on the 4-terminal Terminal Block. Connecting to the High/Off pin will remove all power from the vehicle until the Off-Peak Charging time arrives. The correct pin can easily be identified by looking at the wiring diagram for the DS-200-DL on page 11. The other two pins on the terminal block are the relay contacts for the External Indicator.

In summary, making the best use of the Maintenance Current feature will require the following:

1. Installation of a Time-Of-Use meter by the electric utility.
2. Installation of a clock/timer to allow the DS-200-DL to charge only during the Off-Peak hours.
3. Connecting the timer's control wire to the High/Low pin on the Terminal Block.

# INSTALLATION

## Service Connections



**Caution** **This is a single-phase device. Do not connect all 3 phases of a 3-phase feed !!!** You may use any two phases of a 3-phase wye-connected feed. The center-point of the 3 phases (usually used as Neutral) must be grounded somewhere in the system. A current-carrying Neutral is not needed by the DS-200-DL. Only Line 1, Line 2, and Ground are required, as shown in Fig 3.



**Caution** The two phases used must each measure 120V to Neutral. Earth Ground must be connected to Neutral at only one point, usually at the Service Entry Breaker Panel.



**Caution** If a 240V 3-phase feed is from a Delta-connected secondary, the leg used must have a center-tap. That tap must be Grounded. Only the two phases either side of the center-tapped leg can be used. See Fig. 4 below.



**Caution** **Warranty is void if this unit is wired improperly**




**Warning** Only a qualified electrician should perform the installation. The installation must be performed in accordance with all local electrical codes and ordinances.

Only 3 wires are connected, but care must be taken that the service transformer secondary connection is definitely known, and the 3 wires from the main circuit breaker panel are connected and labeled correctly. Figures 2, 3, and 4 below show the most common service transformer secondary wiring formats.


Notice that L1, L2, & Gnd are labeled on each diagram. Those transformer outputs correspond to the same inputs on the DS-200-DL. Also, each of the two 3-phase diagrams shows an L3 output, which *is not used*. **Do not connect all three phases of a 3-phase secondary to the DS-200-DL. This is a single-phase device.**

The Neutral at the service panel must be connected to earth ground somewhere in the system on any of the three connection arrangements. Ground-fault protection is not possible unless the Neutral (center-tap on the service transformer) is connected to an earth ground. If no ground is provided by the electrical service, a grounding stake must be driven into the ground nearby, following local electrical codes. The grounding stake must be connected to the ground bar in the main breaker panel, and Neutral connected to ground at that point.


 **Warning** Local electrical codes must always be followed when installing the grounding stake.

The following diagrams illustrate the 3 service transformer secondary connections most common in the United States.

*Figure 2. 220/240V Single Phase*

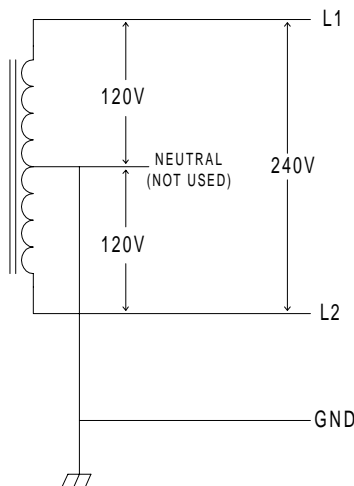


*Figure 3. 208V 3-Phase, Wye-Connected*

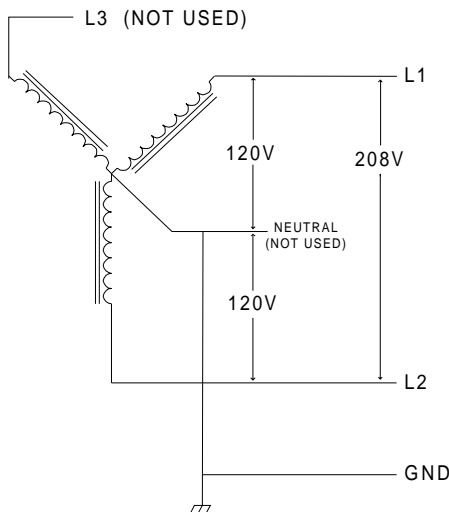

**Note** With a wye-connected secondary, any two of the legs can be used to provide 208V to the DS-200-DL. For example, L1 & L2, or L1 & L3, or L2 & L3. Leave the unused leg open. Do not connect it to a Neutral bar, or to Ground. Be sure the center point is grounded to earth somewhere in the system.

Figure 4. 240V 3-Phase, Delta-Connected, with center-tap on one leg.

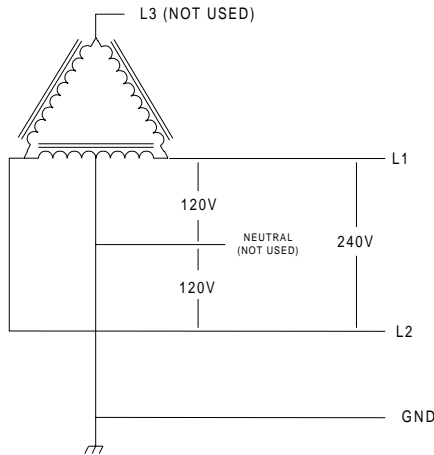

**Caution** With the delta connection, one leg must be center-tapped, and only the two phases on either side of the center tap can be used. The two phases must both measure 120V to neutral. The third line (L3) of the delta is 208V, with respect to neutral, and is sometimes referred to as a “stinger”. **Do not use this third line!** Also, when using the center-tapped leg in this fashion, the power rating for that leg alone is much less than the power rating of the entire transformer. Consult the transformer manufacturer's literature to be sure the single leg can supply the required current.



**Caution** A 3-phase delta-connected transformer secondary without a center-tap on one leg is not usable with the DS-200-DL. No “neutral” point is available to be connected to ground for ground-fault protection, and the DS-200-DL will not allow the contactor to close if it does not sense the presence of a ground wire connected to a “neutral” point on the transformer secondary.

## **Mounting Procedures**

Refer to the DS-200 Installation Guide for complete instructions for either post or wall mounting of the DS-200-DL.


After mounting, continue the installation using the Wiring Instructions beginning on Page 11.

Note: To open the enclosure door, remove the two screws on the left-hand side, using a T15 Torx L Driver.

# Wiring

Before connecting wires to the DS-200-DL, please carefully read the section of this manual titled Service Connections, on page 7. If you are unsure of the type of power provided at the service panel, please consult with your local utility or call your Field Service Representative for assistance.

Figure 5. DS-200-DL Service Wiring

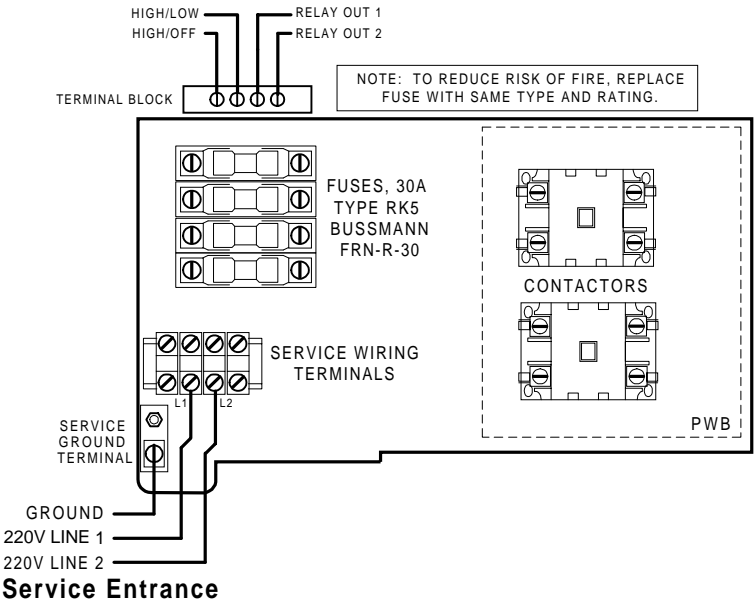

- The DS-200-DL requires a dedicated 208/240 VAC 50/60 Hz, single-phase circuit, with its own 60A circuit breaker.
- Do not use a GFCI breaker with the DS-200-DL. It contains a Personnel Protection circuit that is the equivalent and specifically designed for use with electric vehicles.
- Only 3 wires are needed to wire the DS-200-DL (Line 1, Line 2, and Service Ground), as shown in Fig 6. Wire the unit from the breaker panel using wire sized according to local electrical codes. The circuit breaker should be rated at 60A. Each vehicle will draw a maximum of 24A, for a maximum continuous current of 48A. Derating a 60A breaker 20% for continuous duty allows 48A of continuous current.
- The two phases (Line 1 & Line 2) are terminated in the two center terminals of the Service Wiring Terminals, as shown in Figure 6. The Service Ground is terminated in the Ground Terminal at the bottom of the enclosure.
- Be careful not to damage the PC Board when removing the power-entry knockout, attaching the conduit, or when wiring the service conductors to the contactor.

## Testing After Installation

- Apply utility power, and observe that only the two Diagnostic LEDs are flashing on the circuit board. If they are not flashing, the board may be defective.
- The Charge Test buttons on the PC board simulate connection to a vehicle. Push one of the Charge Test buttons and the center GND button at the same time. The contactor should close, and the green Charge LED on the front panel should light. Be sure and test both the A and B side.
- If a vehicle is available, connect each cable of the DS-200-DL to the vehicle and verify that the contactor closes and the green Charging LED comes on.

**Installation is complete.**

# FOR THE SERVICE TECHNICIAN

There are 5 small LEDs on the PC board to help diagnose problems:

**Diagnostic 1 & 2** – this is the “heartbeat” of the system. When only these LED's are slowly flashing, the system has not detected any failures. If either is lit but not flashing, the board is defective. If neither is lit, either no power is applied, the 3.15A PCB fuse is blown, or the board is defective.

To test the system, press and hold one of the Charge Test buttons and the center GND button simultaneously. If the contactor closes, the DS-200-DL is operating normally. If a vehicle is available, connect the charging cable. The contactor should close. If not, the charging cable or vehicle socket may be defective, or the vehicle is not requesting a charge.

If the DS-200-DL detects an internal failure, the Diagnostic LED will blink at a faster rate. One of the other LEDs may also be lit and indicate the nature of the problem, such as an inoperative Ground Fault circuitry, or a missing Service Ground.

**Load Management Disable:** Lit, with a slow-blinking Diagnostic LED, when either the Power Outage Restore or External Timer mode are active. This is not a failure mode, merely a status indicator. The front panel green Charge LEDs will be blinking. The DS-200-DL's cables must be connected to vehicles for these LEDs to blink. The front panel LEDs will be off for each cable not connected.

**GFCI Trip:** Lit when the unit has detected a ground fault. On the side where the fault is occurring, the contactor will open, the front panel Protection light will also be lit, and the Diagnostic LED will be flashing at a faster rate. The system waits 5 minutes after sensing a fault, then automatically attempts recovery. After several such attempts, it will stay in the Protection mode.

If a ground fault error or an EV connection error has been detected:

1. Remove the EV connector from the vehicle
2. Inspect the connector and the vehicle's charge port. Be sure they are clean and undamaged.
3. Reconnect to the vehicle. If the fault condition persists, a problem may exist on the vehicle.
4. Refer to the vehicle owner's manual for instructions on inspecting and cleaning the charge port.
5. Plug the EV connector back into the vehicle.
6. If the ground fault error is still detected, contact your customer service representative for assistance.

**Ground Missing:** Lit when the unit has detected a missing Service Ground. The DS-200-DL will not close either contactor until a proper Service Ground has been connected. Both of the front panel Protection lights will be lit, and both Diagnostic LEDs will be flashing at a faster rate.

**Note:** If a missing ground is discovered, power should be turned off before re-connecting the ground. If ground is reconnected without turning off the power, it will be necessary to wait 5 minutes for the DS-200 to clear the Ground Missing error.

Table 2 below illustrates the information that can be obtained from the 5 LEDs on the PC board.

*Table 2. PC Board Diagnostic LEDs*

Status	LED 1	LED 2	LED 3	LED 4	LED 5
	Diagnostic 1 Blink Rate	Diagnostic 2 Blink Rate	Load Mgmt Disable	GFCI Trip	Ground Missing
Normal Operation	slow	slow	--	--	--
Charging	slow	slow	--	--	--
Charge Disabled	slow	slow	lit	--	--
CCID Trip	fast	fast	--	lit	--
Ground Missing	fast	fast	--	--	lit
Service Required	fast	fast	--	--	--

Note: a (--) symbol indicates the LED is off.

# SPECIFICATIONS for DS-200-DL

## Line Input Power - Service Entrance

Voltage & Wiring	240V AC single-phase - L1, L2, and Safety Ground
	208V AC 3-phase, wye-connected - Any 2 phases, and Safety Ground
	240V AC 3-phase, delta-connected. With center-tap on one leg, must use only the two phases on either side of the center-tap. The two phases must both measure 120V AC to ground. <b>Do not use the third leg (208V “stinger”).</b>
Current	60A Circuit Breaker. The maximum current for each vehicle is 24A, set by the duty cycle of the Pilot waveform. Internal fuses are 30A for each side.
Frequency	50/60 Hz
Output Power	Variable depending on vehicles. Vehicles will be limited to 24A each. At 208V, this will be 5 KW per vehicle, or 10 KW if both vehicles are charging.
<b>Dimensions</b>	
Height	304 mm (12 in)
Width	457 mm (18 in)
Depth	203 mm (8 in)
Cable Length	approximately 6.8 m (22 ft)
Weight (with Cables)	15 kg (33 lbs)
Cable Lengths	Cable A - 4.6 m (15 ft), Cable B - 6.4 m (21 ft)
<b>Environment</b>	
Operating Temperature	-40°C (-40°F) / +50°C (+122°F)
NEMA Rating	NEMA 4 - outdoor use, watertight.

## External Connections

Timer Connection      Ground to disable charging, leave open to charge.  
12 volts with 1K source resistance when open  
circuit, 12 ma sink current when grounded.

Error Relay Contacts      24V AC or DC, 5A max current, closed if error  
present.

Agency Approvals      UL Listed, FCC Class B

Color      Gray

## FCC INFORMATION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This product has been designed to protect against Radio Frequency Interference (RFI). However there are some instances where high powered radio signals or nearby RF-producing equipment (such as digital phones, RF communications equipment, etc.) could affect operation.

If interference to your charge station is suspected, we suggest the following steps be taken before consulting your EVI Sales and Service Representative for assistance:

1. Reorient or relocate nearby electrical appliances or equipment during charging.
2. Turn off nearby electrical appliances or equipment during charging.



**Caution** Changes or modifications to this product by other than an authorized service facility could void FCC compliance.

## WARRANTY INFORMATION

Electric Vehicle Infrastructure, Inc. ("EVI") warrants this DS-200-DL electric vehicle charging product to be free from defects in material, manufacture and design for a period of three year(s) after the date of purchase. If this product is defective in materials, manufacture or design during this warranty period, EVI will, at its option, repair or replace the product. Repair parts and /or replacement products may be either new or reconditioned at EVI's discretion. This limited warranty does not include service to repair damage from improper installation, improper connections with peripherals, external electrical fault, accident, disaster, misuse, abuse or modifications to the product not approved in writing by EVI. Any service repair outside the scope of this limited warranty shall be at applicable rates and terms then in effect.

All other express and implied warranties for this product including the warranties of merchantability and fitness for a particular purpose, are hereby disclaimed. Some states do not allow the exclusion of implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

If this product is not as warranted above, your sole and exclusive remedy shall be repair or replacement as provided above. In no event will EVI, any of its authorized sales and service representatives, or its parent company be liable to customer or any third party for any damages in excess of the purchase price of the product. This limitation applies to damages of any kind including any direct or indirect damages, lost profits, lost saving or other special, incidental, exemplary or consequential damages whether for breach of contract, tort or otherwise or whether arising out of the use of or inability to use the product, even if EVI or an authorized EVI representative or dealer has been advised of the possibility of such damages or of any claim by any other party. Some states do not allow the exclusion or limitation of incidental damages for some products, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

## CUSTOMER SUPPORT

Call your Service Representative at any time, 24 hours a day, at the number below. **PLEASE HAVE THE MODEL NUMBER AND SERIAL NUMBER AVAILABLE WHEN YOU CALL.** These can be found on the side of the enclosure. If your call is made after business hours or on weekends, please leave your name, telephone number, the unit's serial number, and a brief description of the problem. A Field Service Representative will call back at the earliest opportunity.

**Toll-Free Maintenance Hotline \_\_\_\_ 888-438-3844**

## MAINTENANCE

The DS-200-DL requires no periodic maintenance other than occasional cleaning.



**Warning** To reduce the risk of electrical shock or equipment damage, do not allow liquid to enter the unit while cleaning it.

1. Turn off your charge station at the circuit breaker before cleaning.
2. Clean your charge station using a soft cloth lightly moistened with mild detergent solution. Never use any type of abrasive pad, scouring powder, or flammable solvents such as alcohol or benzene.

**Please visit EVI's Website @ [www.evii.com](http://www.evii.com)**

# Notes





®

ELECTRIC VEHICLE INFRASTRUCTURE, INC.  
11839 INDUSTRIAL COURT ~ AUBURN, CA 95603